



Voltage compatability Chart for Universal AC Adaptor (ACD-100)

Camera Make		Camera Model	Voltage Setting	Pin Type
AGFA	E - Photo Smile	CL-18, CL-30, CL-50, 307, 780, 780C, 1280, 1680	6.5V	F
CANON	PowerShot	A100, A200, A300, A310, A400	3V	D
CANON	PowerShot	A10, A20, A30, A40, A60, A70, A75, A80, A85, A95	4.5V	E
CANON	PowerShot	S100, S110, S200, S230, S300, S330, S400, S410, S500	4.5V	CN1
CASIO		GV-10, GV-20, QV-70, QV-700, QV-770, QV-780, QV-2000UX, QV-2300UX,	6V	E
		QV-2800UX, QV-2900, QV-3000EX, QV-3000plus, QV-3500, QV-4000,	6V	E
		QV-5000SX, QV-5500SX, QV-5700, QV-7000SX, QV-8000SX	6V	E
EPSON	PC - series	550, 600, 650, 700, 750Z, 850Z, 3000Z, 3100Z	7V	F
FUJIFILM	FinePix	A101, A200, A201, A203, A205S, A210, A303, A310, A330, A340	3V	D
		30i, 40i, 2600, 2650, 4700, E500, E510, E550	3V	D
FUJIFILM	FinePix	F401, F402, F410, F601, F610, F700, F710 , M603, S602, S1+S2 Pro, S20 Pro, 50i, 1300, 1400, 2300, 2400, 2800, 3800, 4800, 4900, 6800, 6900	5V	E
FUJIFILM	MX - series	500, 600, 700, 1200, 1700, 2700, 2900 DX-10	5V	E
HP	PhotoSmart	120, 120xi, 215, 312, 312xi, 315, 318, 320, 320xi, 612, 612xi, 620, 620xi, 715,	6V	E
		720, 720xi, 850, 850xi, 945, 945xi , C-200, C-200xi	6V	E
KODAK	DC - series	200, 200plus, 210, 210plus, 215, 220, 240, 260,265, 280, 290, 3200Z, 3400Z, 5000Z	7V	F
KODAK	DX - series	4330, 4530, 6340, 6440	3V	D
KODAK	CX - series	4200, 4210, 4230, 4300, 6200, 6230, 6330, 7220, 7300, 7330, 7430, 7530	3V	D
KODAK	LS & DX - series	LS420, LS443, LS633, LS743, LS753, DX6490, DX7440, DX7630	5V	E
KONICA		Q-M200	5V	E
KYOCERA		S-3, S-4, S5	5V	E
MINOLTA	DiIMAGE	5, 7, 7i, 7Hi, 2300, 2330Z, A1, A2 , E201, E203, EX1500, S304, S404, S414, Z1, Z2, Z10	6V	E
NIKON	COOLPIX	SQ, 2100, 3100	4.5V	E
NIKON	COOLPIX	100, 300, 600, 700, 750, 800, 900, 950, 990	6.5V	F
NIKON	COOLPIX	775, 880, 885, 995, 2000, 4300, 4500, 5000, 5400, 5700, 8700	8.4V	F
OLYMPUS	D-series & BRIO	D-100, D150/C1, D-230, D-40E, D-390, D-395 , D-520E, D-540Z , D-560Z,	3.4V	E
		D-565Z, D575Z, D-580Z	3.4V	E
OLYMPUS	C - series	211Z, 320L, 700UZ, 720UZ, 725UZ , 730UZ, 740UZ, 750UZ, 2000, 2020, 2030, 2040,	6.5V	F
		2100UZ, 2500L, 3000Z, 3020Z, 3030Z, 3040Z, 4000, 4040Z, 5050Z, C5060Z, C-8080Z	6.5V	F
OLYMPUS	D- series	200L, 220Z, 320Z, 340L, 340R, 360L, 370, 380, 400Z, 450Z, 460Z, 490Z, 500L,	6.5V	F
		510Z, 550Z, 600L, 620L	6.5V	F
OLYMPUS	E - series	E-10, E-20N	6.5V	F
OLYMPUS	C-series	C- 50 Zoom, C-60 Zoom , C-760UZ, C-765UZ, C-770UZ , C-5000Z	5V	E
OLYMPUS	Stylus Digital	Stylus 300, Stylus 400, Stylus 410	5V	E
PANASONIC		DMC-F7	5V	D
PANASONIC		DMC-FZ1, DMC-LC5, DMC-LC40	8.4V	F
PENTAX	Optio	330, 330RS, 430, 430RS	5V	E
RICOH	RDC - series	2, 2E, 7, 300, 300Z, 4200, 4300, 5000, 5300, i500, i700, i700G; Caplio RR1	5V	E
SONY	DSC-series	P8, P10, P32, P41 , P52, P72, P92	4.5V	G
TOSHIBA	PDR - series	T-10, T-20, T-30, 2300, 3300, 3310, 3320, 3330, 4300, M1, M3, M4,M5, M11,	5V	E
		M21, M25, M60, M61, M65, M70, M71,M81	5V	E