

Compatibility Chart

AGFA		
AGFA	307	DPS-9000
AGFA	780	DPS-9000
AGFA	1280	DPS-9000
AGFA	1680	DPS-9000
AGFA	780C	DPS-9000
AGFA	CL-18	DPS-9000
AGFA	CL-30	DPS-9000
AGFA	CL-45	DPS-9000
AGFA	CL-50	DPS-9000

CANON		
CANON	PowerShot A10	DPS-9000
CANON	PowerShot A20	DPS-9000
CANON	PowerShot A30	DPS-9000
CANON	PowerShot A40	DPS-9000
CANON	PowerShot A430	DPS-9000
CANON	PowerShot A450	DPS-9000
CANON	PowerShot A460	DPS-9000
CANON	PowerShot A50	DPS-9000
CANON	PowerShot A550	DPS-9000
CANON	PowerShot A560	DPS-9000
CANON	PowerShot A570	DPS-9000
CANON	PowerShot A60	DPS-9000
CANON	PowerShot A610	DPS-9000
CANON	PowerShot A620	DPS-9000
CANON	PowerShot A640	DPS-9000
CANON	PowerShot A70	DPS-9000
CANON	PowerShot A720	DPS-9000
CANON	PowerShot A75	DPS-9000
CANON	PowerShot A80	DPS-9000
CANON	PowerShot A85	DPS-9000
CANON	PowerShot A95	DPS-9000

CASIO		
CASIO	GV 10	DPS-9000
CASIO	GV-20	DPS-9000
CASIO	QV 2000UX	DPS-9000
CASIO	QV 2300UX	DPS-9000
CASIO	QV 2800UX	DPS-9000
CASIO	QV 2900	DPS-9000
CASIO	QV 3000 PLUS	DPS-9000
CASIO	QV 3000EX	DPS-9000
CASIO	QV 3500	DPS-9000
CASIO	QV 4000	DPS-9000
CASIO	QV 5000SX	DPS-9000
CASIO	QV 5500SX	DPS-9000
CASIO	QV 5700	DPS-9000
CASIO	QV 70	DPS-9000
CASIO	QV 700	DPS-9000
CASIO	QV 7000SX	DPS-9000
CASIO	QV 770	DPS-9000
CASIO	QV 780	DPS-9000
CASIO	QV 8000SX	DPS-9000

EPSON		
EPSON	PC 3000Z	DPS-9000
EPSON	PC 3100Z	DPS-9000
EPSON	PC 550	DPS-9000
EPSON	PC 600	DPS-9000
EPSON	PC 650	DPS-9000
EPSON	PC 700	DPS-9000

EPSON	PC 750Z	DPS-9000
EPSON	PC 850Z	DPS-9000
FUJIFILM		
FUJIFILM	DX 10	DPS-9000
FUJIFILM	FinePix 1300	DPS-9000
FUJIFILM	FinePix 1400	DPS-9000
FUJIFILM	FinePix 2300	DPS-9000
FUJIFILM	FinePix 2400	DPS-9000
FUJIFILM	FinePix 2800	DPS-9000
FUJIFILM	FinePix 3800	DPS-9000
FUJIFILM	FinePix 4800	DPS-9000
FUJIFILM	FinePix 4900	DPS-9000
FUJIFILM	FinePix 50i	DPS-9000
FUJIFILM	FinePix 6800	DPS-9000
FUJIFILM	FinePix 6900	DPS-9000
FUJIFILM	FinePix F401	DPS-9000
FUJIFILM	FinePix F402	DPS-9000
FUJIFILM	FinePix F410	DPS-9000
FUJIFILM	FinePix F440	DPS-9000
FUJIFILM	FinePix F450	DPS-9000
FUJIFILM	FinePix F601	DPS-9000
FUJIFILM	FinePix F610	DPS-9000
FUJIFILM	FinePix F700	DPS-9000
FUJIFILM	FinePix F710	DPS-9000
FUJIFILM	FinePix F810	DPS-9000
FUJIFILM	FinePix M603	DPS-9000
FUJIFILM	FinePix S1 Pro	DPS-9000
FUJIFILM	FinePix S2 Pro	DPS-9000
FUJIFILM	FinePix S20 Pro	DPS-9000
FUJIFILM	FinePix S3 Pro	DPS-9000
FUJIFILM	FinePix S3000	DPS-9000
FUJIFILM	FinePix S3100	DPS-9000
FUJIFILM	FinePix S5000	DPS-9000
FUJIFILM	FinePix S5100	DPS-9000
FUJIFILM	FinePix S5200	DPS-9000
FUJIFILM	FinePix S5600	DPS-9000
FUJIFILM	FinePix S602	DPS-9000
FUJIFILM	FinePix S602Z Pro	DPS-9000
FUJIFILM	FinePix S7000	DPS-9000
FUJIFILM	FinePix S7100	DPS-9000
FUJIFILM	FinePix S9000	DPS-9000
FUJIFILM	FinePix S9100	DPS-9000
FUJIFILM	FinePix S9500	DPS-9000
FUJIFILM	FinePix S9600	DPS-9000
FUJIFILM	MX 1200	DPS-9000
FUJIFILM	MX 1700	DPS-9000
FUJIFILM	MX 2700	DPS-9000
FUJIFILM	MX 2900	DPS-9000
FUJIFILM	MX 500	DPS-9000
FUJIFILM	MX 600	DPS-9000
FUJIFILM	MX 700	DPS-9000
HP		
HP	C-200	DPS-9000
HP	C-200xi	DPS-9000
HP	PhotoSmart 120, 120xi	DPS-9000
HP	PhotoSmart 215	DPS-9000
HP	PhotoSmart 312, 312xi	DPS-9000
HP	PhotoSmart 315	DPS-9000
HP	PhotoSmart 318	DPS-9000
HP	PhotoSmart 320, 320xi	DPS-9000
HP	PhotoSmart 612, 612xi	DPS-9000
HP	PhotoSmart 620, 620xi	DPS-9000

HP	PhotoSmart 715	DPS-9000
HP	PhotoSmart 720, 720xi	DPS-9000
HP	PhotoSmart 850, 850xi	DPS-9000
HP	PhotoSmart 945	DPS-9000
HP	PhotoSmart M307	DPS-9000
HP	PhotoSmart M407	DPS-9000
HP	PhotoSmart M525	DPS-9000
HP	PhotoSmart M527	DPS-9000
KODAK		
KODAK	DC 200	DPS-9000
KODAK	DC 210	DPS-9000
KODAK	DC 210 PLUS	DPS-9000
KODAK	DC 215	DPS-9000
KODAK	DC 220	DPS-9000
KODAK	DC 240	DPS-9000
KODAK	DC 260	DPS-9000
KODAK	DC 265	DPS-9000
KODAK	DC 280	DPS-9000
KODAK	DC 290	DPS-9000
KODAK	DC 3200	DPS-9000
KODAK	DC 3400	DPS-9000
KODAK	DC 4800	DPS-9000
KODAK	DC 5000Z	DPS-9000
KODAK	DX 6490	DPS-9000
KODAK	DX 7440	DPS-9000
KODAK	DX 7590	DPS-9000
KODAK	DX 7630	DPS-9000
KODAK	EASY SHARE ONE	DPS-9000
KODAK	LS 420	DPS-9000
KODAK	LS 443	DPS-9000
KODAK	LS633	DPS-9000
KODAK	LS743	DPS-9000
KODAK	LS753	DPS-9000
KODAK	ONE	DPS-9000
KODAK	P850	DPS-9000
KODAK	P880	DPS-9000
KODAK	V-530	DPS-9000
KODAK	V-550	DPS-9000
KODAK	V-570	DPS-9000
KODAK	V610	DPS-9000
KODAK	Z730	DPS-9000
KODAK	Z7590	DPS-9000
KODAK	Z760	DPS-9000
KONICA	Q-M200	DPS-9000
KYOCERA		
KYOCERA	Finecam S3	DPS-9000
KYOCERA	Finecam S4	DPS-9000
MINOLTA		
MINOLTA	DiMAGE 2300	DPS-9000
MINOLTA	DiMAGE 2330Z	DPS-9000
MINOLTA	DiMAGE 5	DPS-9000
MINOLTA	DiMAGE 7	DPS-9000
MINOLTA	DiMAGE 7Hi	DPS-9000
MINOLTA	DiMAGE 7i	DPS-9000
MINOLTA	DiMAGE A1	DPS-9000
MINOLTA	DiMAGE A2	DPS-9000
MINOLTA	DiMAGE E201	DPS-9000
MINOLTA	DiMAGE E203	DPS-9000
MINOLTA	DiMAGE EX1500	DPS-9000
MINOLTA	DiMAGE S304	DPS-9000
MINOLTA	DiMAGE S404	DPS-9000

MINOLTA	DiMAGE S414	DPS-9000
MINOLTA	DiMAGE Xt	DPS-9000
MINOLTA	DiMAGE Z1	DPS-9000
MINOLTA	DiMAGE Z10	DPS-9000
MINOLTA	DiMAGE Z2	DPS-9000
MINOLTA	DiMAGE Z6	DPS-9000
NIKON		
NIKON	CoolPix 100	DPS-9000
NIKON	CoolPix 2000	DPS-9000
NIKON	CoolPix 300	DPS-9000
NIKON	CoolPix 4300	DPS-9000
NIKON	CoolPix 4500	DPS-9000
NIKON	CoolPix 5000	DPS-9000
NIKON	CoolPix 5400	DPS-9000
NIKON	CoolPix 5700	DPS-9000
NIKON	CoolPix 600	DPS-9000
NIKON	CoolPix 700	DPS-9000
NIKON	CoolPix 750	DPS-9000
NIKON	CoolPix 775	DPS-9000
NIKON	CoolPix 800	DPS-9000
NIKON	CoolPix 8700	DPS-9000
NIKON	CoolPix 880	DPS-9000
NIKON	CoolPix 885	DPS-9000
NIKON	CoolPix 900	DPS-9000
NIKON	CoolPix 950	DPS-9000
NIKON	CoolPix 990	DPS-9000
NIKON	CoolPix 995	DPS-9000
OLYMPUS		
OLYMPUS	C 60 Zoom	DPS-9000
OLYMPUS	C2000	DPS-9000
OLYMPUS	C2020	DPS-9000
OLYMPUS	C2030	DPS-9000
OLYMPUS	C2040	DPS-9000
OLYMPUS	C2100UZ	DPS-9000
OLYMPUS	C211Z	DPS-9000
OLYMPUS	C2500L	DPS-9000
OLYMPUS	C3000Z	DPS-9000
OLYMPUS	C3020Z	DPS-9000
OLYMPUS	C3030Z	DPS-9000
OLYMPUS	C3040Z	DPS-9000
OLYMPUS	C320L	DPS-9000
OLYMPUS	C4000	DPS-9000
OLYMPUS	C4040Z	DPS-9000
OLYMPUS	C50 Z00M	DPS-9000
OLYMPUS	C5000Z	DPS-9000
OLYMPUS	C5050Z	DPS-9000
OLYMPUS	C5060WZ	DPS-9000
OLYMPUS	C7000Z	DPS-9000
OLYMPUS	C700UZ	DPS-9000
OLYMPUS	C7070	DPS-9000
OLYMPUS	C720UZ	DPS-9000
OLYMPUS	C725UZ	DPS-9000
OLYMPUS	C730UZ	DPS-9000
OLYMPUS	C740UZ	DPS-9000
OLYMPUS	C750UZ	DPS-9000
OLYMPUS	C760UZ	DPS-9000
OLYMPUS	C765UZ	DPS-9000
OLYMPUS	C770UZ	DPS-9000
OLYMPUS	C8080WZ	DPS-9000
OLYMPUS	D200L	DPS-9000
OLYMPUS	D220Z	DPS-9000
OLYMPUS	D300L	DPS-9000

OLYMPUS	D320Z	DPS-9000
OLYMPUS	D340L	DPS-9000
OLYMPUS	D340R	DPS-9000
OLYMPUS	D360L	DPS-9000
OLYMPUS	D370	DPS-9000
OLYMPUS	D380	DPS-9000
OLYMPUS	D400Z	DPS-9000
OLYMPUS	D410	DPS-9000
OLYMPUS	D435	DPS-9000 (NEW)
OLYMPUS	D450Z	DPS-9000
OLYMPUS	D460Z	DPS-9000
OLYMPUS	D490Z	DPS-9000
OLYMPUS	D500L	DPS-9000
OLYMPUS	D510	DPS-9000
OLYMPUS	D550Z	DPS-9000
OLYMPUS	D555	DPS-9000 (NEW)
OLYMPUS	D590	DPS-9000
OLYMPUS	D600L	DPS-9000
OLYMPUS	D620L	DPS-9000
OLYMPUS	D630	DPS-9000
OLYMPUS	E10	DPS-9000
OLYMPUS	E20N	DPS-9000
OLYMPUS	FE 550	DPS-9000
OLYMPUS	SP 350	DPS-9000 (NEW)
OLYMPUS	SP 500	DPS-9000
OLYMPUS	SP 550	DPS-9000
OLYMPUS	SP 700	DPS-9000
OLYMPUS	SP500	DPS-9000
OLYMPUS	Stylus 1000i	DPS-9000
OLYMPUS	Stylus 300	DPS-9000
OLYMPUS	Stylus 400	DPS-9000
OLYMPUS	Stylus 410	DPS-9000
OLYMPUS	Stylus 500	DPS-9000
OLYMPUS	Stylus 600	DPS-9000
OLYMPUS	Stylus 600 Digital	DPS-9000
OLYMPUS	Stylus 800	DPS-9000
PANASONIC		
PANASONIC	Lumix DMC-FZ1	DPS-9000
PANASONIC	Lumix DMC-FZ20	DPS-9000
PANASONIC	Lumix DMC-FZ30	DPS-9000
PENTAX		
PENTAX	*ist D	DPS-9000
PENTAX	*ist DL	DPS-9000
PENTAX	*ist DS	DPS-9000
PENTAX	Optio 330	DPS-9000
PENTAX	Optio 330RS	DPS-9000
PENTAX	Optio 430	DPS-9000
PENTAX	Optio 430RS	DPS-9000
PENTAX	Optio MX-4	DPS-9000
RICOH		
RICOH	Caplio RR1	DPS-9000
RICOH	RDC 4200	DPS-9000
RICOH	RDC 4300	DPS-9000
RICOH	RDC 5000	DPS-9000
RICOH	RDC 5300	DPS-9000
RICOH	RDC-2	DPS-9000
RICOH	RDC-2E	DPS-9000
RICOH	RDC-300	DPS-9000
RICOH	RDC-300Z	DPS-9000
RICOH	RDC-7	DPS-9000
RICOH	RDC-i500	DPS-9000

RICOH	RDC-i700	DPS-9000
SONY		
SONY	F707	DPS-9000
SONY	F717	DPS-9000
SONY	MVC-CD200	DPS-9000
SONY	MVC-CD250	DPS-9000
SONY	MVC-CD300	DPS-9000
SONY	MVC-CD350	DPS-9000
SONY	MVC-CD400	DPS-9000
SONY	MVC-CD500	DPS-9000
SONY	MVC-FD73	DPS-9000
SONY	MVC-FD75	DPS-9000
SONY	MVC-FD85	DPS-9000
SONY	MVC-FD87	DPS-9000
SONY	MVC-FD90	DPS-9000
SONY	MVC-FD91	DPS-9000
SONY	MVC-FD92	DPS-9000
SONY	MVC-FD95	DPS-9000
SONY	MVC-FD97	DPS-9000
SONY	S30	DPS-9000
SONY	S50	DPS-9000
SONY	S70	DPS-9000
SONY	S75	DPS-9000
SONY	S85	DPS-9000
SONY	F828	DPS-9000
TOSHIBA		
TOSHIBA	PDR-2300	DPS-9000
TOSHIBA	PDR-3300	DPS-9000
TOSHIBA	PDR-3310	DPS-9000
TOSHIBA	PDR-3320	DPS-9000
TOSHIBA	PDR-3330	DPS-9000
TOSHIBA	PDR-4300	DPS-9000
TOSHIBA	PDR-M1	DPS-9000
TOSHIBA	PDR-M11	DPS-9000
TOSHIBA	PDR-M21	DPS-9000
TOSHIBA	PDR-M25	DPS-9000
TOSHIBA	PDR-M3	DPS-9000
TOSHIBA	PDR-M4	DPS-9000
TOSHIBA	PDR-M5	DPS-9000
TOSHIBA	PDR-M60	DPS-9000
TOSHIBA	PDR-M61	DPS-9000
TOSHIBA	PDR-M65	DPS-9000
TOSHIBA	PDR-M70	DPS-9000
TOSHIBA	PDR-M71	DPS-9000
TOSHIBA	PDR-M81	DPS-9000
TOSHIBA	PDR-T10	DPS-9000
TOSHIBA	PDR-T20	DPS-9000
TOSHIBA	PDR-T30	DPS-9000